# 

## Safe Box Operation Instructions



ORBITA TECHNOLOGY CO.,LTD Add:Orbita Industrial Park , Changbu Village , Xinxu Town , Huiyang District, Huizhou City ,Guangdong Province, China Tel:86-752-3633501 Fax:86-752-3633600 Mail:sales@orbitatech.com Mobile:86-18928480199 Website: www.orbitalock.comwww.orbitatech.com

Thank you for purchasing our products, please read the instructions carefully before use, please keep the instructions for future reference

#### -. Opening safe box

2043MD safe can be opened by user password (4-6 digits, factory setting 1234) and master password (6 digits).

Steps for first time opening the safe box:

a. Input 4\*5# battery into outer connecting battery case, and connect battery case with safe box.

b. Enter the factory setting user password "1234", then press" #", Nixie tube shows "<code>OPERIB</code>", then you can pull the safe door.

c. After door is opened, take out the battery and input into the safe inside battery case. (on the door backside)

#### Steps for using master password to open safe box:

Enter "\*\*002#", input master password (refer to 3rd menu how to add mater password), press "#" to confirm to open the safe box.

#### $\Box$ , Closing safe box

Method a. Enter 4-6 digits, press "#" to confirm, user password is set successfully. Close the safe door, user password will display on the Nixie tube. Guest can close the safe box by press "#" only within 15 minutes after setting the user password. Method b. Enter "\*\*002#", input 6 digits' master password, press "#" to confirm, Nixie tube shows "CL0515". Method c. Use mechanical key to close the safe box

#### $\Xi$ 、Anti - prying virtual password function

Under opening status, enter "\*\*001#", show"  $\Pi \Omega L d F$ ", enter last master password, press" #" to confirm. If failed, Nixie tube shows"  $\Omega L d E r r$ ", if succeed, shows " $\Pi \Omega E d F$ ", then can enter 6 digits' new master password. When shows " $\Pi S \Pi \Pi F d F$ ", enter same new password again, then finish setting. If set successfully, shows "F E G F", set wrongly. shows "F E G F". For new safe, no master password was set, then input new master password directly.

#### 四、Anti - prying virtual password function

Use mechanical key to open the safe box when forgot password .

### 五、Notes

1. When voltage is lower than "4.8" V, Nixie Tube will show " bRffL0 " and beep once, then need to change new battery.

2. Enter wrong password will show "FEYErr", if wrongly input 3 times, safe will be locked for 15 minutes, shows" H0Ld +Minutes "

3. Enter "\*\*003#" , can hide the password and shows " $\sigma$  ", do same operation again , will show the password .

4. Click "\*" to delete when enter passwords

5. When safe is under opening status, enter "\*\*0752456789#" to delete the parameters set by guests. Nixie tube will show " [LrPflr"

6. When close the safe, if not close completely , nixie tube will show "runErr" and can hear a long beep.

7. Enter" \*\*004#" to know the safe version . format is " $\cup$  E - +3 numbers "